


LIGHTING SET UP AND PLACEMENT

RING LIGHT HEIGHT ~150CM (5FT)
AND ~60CM (2FT)
LEFT OF CAMERA

DIMMING: **100%**

COLOR TEMP: **5500K**

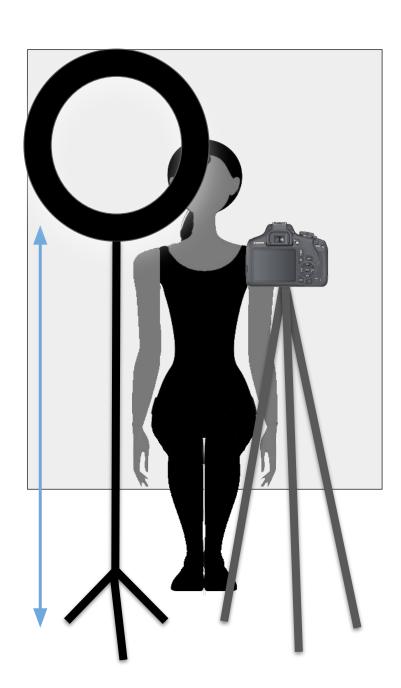

CAMERA SETTINGS GUIDE

SHOOTING MODE: MANUAL (M) VIDEO MODE FHD 29.97 IPB STD MP4

EXPOSURE SETTINGS

ISO: 800

APERTURE: 5.6 SHUTTER: 1/60

FOCAL LENGTH: 35MM

PICTURE STYLE: PORTRAIT

WB: 5200K

AUDIO SETTINGS:

SOUND REC: MANUAL

REC. LEVEL: 75%



SETTING - M

SETTING THE ISO TO 800



CAMERA SETTINGS GUIDE: APERTURE

SETTING THE APERTURE TO 5.6





PRESS AND HOLD THE APERTURE BUTTON AND TURN THE MAIN DIAL TO ADJUST TO 5.6

CAMERA SETTINGS GUIDE: SHUTTER SPEED

SETTING THE SHUTTER SPEED TO 1/60



TURN THE MAIN DIAL TO ADJUST TO 1/60

CAMERA SETTINGS GUIDE: FOCAL LENGTH AND AUTO FOCUS

SETTING THE FOCAL LENGTH TO 35MM





TURN THE ZOOM RING ON THE LENS TO 35MM

CAMERA SETTINGS GUIDE: PICTURE STYLE - PORTRAIT

SETTING THE PICTURE STYLE TO PORTRAIT



PRESS THE PICTURE STYLE SELECTION BUTTON AND USE THE MAIN DIAL TO ADJUST TO PORTRAIT MODE (P)

CAMERA SETTINGS GUIDE: WHITE BALANCE

SETTING THE WHITE BALANCE TO DAYLIGHT



PRESS THE WHITE BALANCE SELECTION BUTTON AND USE THE MAIN DIAL TO ADJUST TO DAYLIGHT (5200K)

CAMERA SETTINGS GUIDE: AUDIO SETTINGS

SETTING THE AUDIO RECORD LEVEL



- PRESS THE MENU BUTTON
 AND NAVIGATE TO THE
 SOUND RECORDING OPTIONS
- SET SOUND REC TO MANUAL
- SET REC. LEVEL TO 75%

SETTING THE RODE MICROPHONE




ATTACH THE RODE MIC TO THE CAMERA HOTSHOE AND PLUG THE MIC CABLE INTO THE MIC INPUT AS SHOWN

CAMERA SETUP: HDMI TO USB CONFIG

SETTING UP THE HDMI TO ADAPTER TO LAPTOP CONFIGURATION



CAMERA AND BACKGROUND PLACEMENT

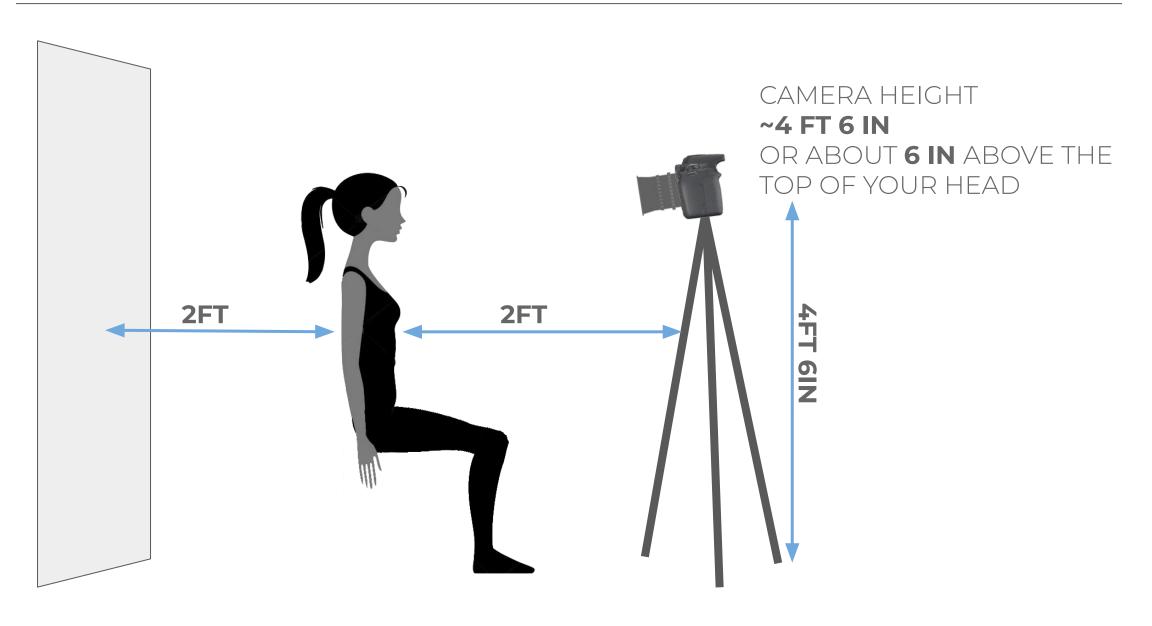

LIGHTING SET UP AND PLACEMENT

~5FTAND **~2FT LEFT** OF CAMERA

DIMMING: 100%

COLOR EMP: **5500K**

